


ModMon Encore

MODULATION MONITOR

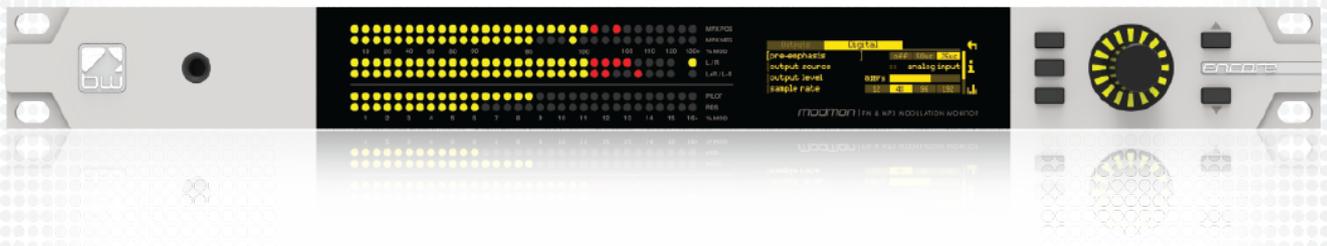

USERS MANUAL

Contents

1. The Encore Family
2. The ModMon Encore
3. Warranty
4. Safety
5. Front & Rear Panels
6. User Interface
7. Installation & Operation
8. System Configuration
9. Presets Configuration
10. Menu Structure
11. Routing and Block Diagram
12. Technical Specification

About Encore



Welcome to the Encore family!

Encore is a modern, high-quality range of products designed around a common hardware and software platform.

The Encore family includes:

- Audio processors
- RDS coders
- Stereo generators
- Rebroadcast receivers
- Audio backup devices
- Modulation analysers
- ...and is growing all the time!

Encore uses high-quality components, robust hardware and an innovative user interface, which provides many benefits to broadcast technology users.

Modules and components are common to all products in the range – meaning ease of service and minimal need to stock replacement parts.

For example, if you have an RDS coder, a modulation monitor and a backup audio device, the same power supply, the same audio board and the same DSP board is used in each one!

The rear panel is the same on every product. This means wiring can be standardised, installation is simple and easy.

Front panels are consistent across the range – with OLED screens, LED displays, a scroll knob and a few soft-keys, every products is easy to operate.

Encore has been designed to be very simple and intuitive to set up and operate – everything is where you'd expect it to be and is easy to understand and use. Once you've used one Encore product you can use them all!

The user interface is designed around the concept of 'System' and 'Presets' menus, where the System menu is the same for every product and contains all the audio level settings, the versatile and exclusive 'Events and Alarms' section as well the communications, monitoring and telemetry system.

All product-specific settings are contained within the 'Presets' menu – providing an automobile radio -like interface which works just as well for profiles in an RDS encoder as it does for settings in an audio processor, a modulation monitor or rebroadcast receiver.

The web remote control interface is common across all products, as is the API and the internal language, so it's simple to interface the whole Encore range of products with your common monitoring and telemetry system.

Every Encore product includes, as standard:

- Backup audio
- Events and Triggers –based Telemetry
- Comprehensive communication section
- Analogue and Digital audio interfaces
- Ethernet, USB and RS232 connectivity
- Interactive Web remote system
- SNMP and TelNet support

A common hardware and software family of products, which are easy to set up, easy to use, easy to maintain and easy to service.

Innovation, usability, quality, and confidence are what you get from Encore!

The ModMon Encore

2

Congratulations on your acquisition of this BW Broadcast ModMon Encore!

One of the family of 'Encore' products, ModMon Encore is a receiver and modulation monitor.

The ModMon Encore displays measurements of stereo pilot, RDS sub-carrier, MPX levels, L+R, L-R and L/R audio on an accurate LED matrix.

It also allows A/B comparison of two received signals.

The unit features:

- Two antenna inputs, two separate tuners
- Analogue and digital outputs
- Two factory presets
- 8 user presets
- Remote Listen {future release}
- Headphone output
- RDS measurement and analysis

Thank you for choosing this product, we hope it will give you many years of joyous and satisfying pleasure.

Please read on to see how to set up and use the ModMon Encore in your particular situation.

Warranty

Please ensure the warranty registration process is completed upon receipt of this product. To do so, go to www.bwbroadcast.com/warranty with your product's serial number to hand. BW Broadcast warrants the mechanical and electronic components of this product to be free of defects in material and workmanship for a period of up to ten years from the original date of purchase, in accordance with the warranty regulations described below. If the product shows any defects within the specified limited warranty period that are not due to normal wear and tear and/or improper handling by the user, BW Broadcast shall, at its sole discretion, either repair or replace the product. If the warranty claim proves to be justified, the product will be returned to the user. The freight will be paid by BW Broadcast within the first 2 years, thereafter freight will be the responsibility of the customer. Warranty claims other than those indicated above are expressly excluded.

Note: The warranty registration process must be carried out as described above to enable warranty cover for 10 years. Otherwise, a 2-year warranty period applies.

Return authorisation number: To obtain warranty service, the buyer (or his authorised dealer) must contact BW Broadcast during normal business hours BEFORE returning the product. All inquiries must be accompanied by a description of the problem. BW Broadcast will then issue a return authorisation number. Subsequently, the product must be returned in its original shipping carton, together with the return authorisation number to the address indicated by BW Broadcast.

Warranty regulations: Any product deemed eligible for repair or replacement by BW Broadcast under the terms of this warranty will be repaired or replaced within 30 days of receipt of the product at BW Broadcast. If the product needs to be modified or adapted in order to comply with applicable technical or safety standards on a national or local level, in any country which is not the country for which the product was originally developed and manufactured, this modification/adaptation shall not be considered a defect in materials or workmanship. The warranty does not cover any such modification/adaptation, irrespective of whether it was carried out properly or not. Under the terms of this warranty, BW Broadcast shall not be held responsible for any cost resulting from such a modification/adaptation. Free inspections and maintenance/repair work are expressly excluded from this warranty, in particular, if caused by improper handling of the product by the user. This also applies to defects caused by normal wear and tear, in particular, of faders, potentiometers, keys/buttons and similar parts. Damages/defects caused by the following conditions are not covered by this warranty: Misuse, neglect or failure to operate the unit in compliance with the instructions given in BW Broadcast user or service manuals. Connection or operation of the unit in any way that does not comply with the technical or safety regulations applicable in the country where the product is used. Damages/defects caused by force majeure or any other condition that is beyond the control of BW Broadcast. Any repair or opening of the unit carried out by unauthorized personnel (user included) will void the warranty. If an inspection of the product by BW Broadcast shows that the defect in question is not covered by the warranty, the inspection costs are payable by the customer. Products that do not meet the terms of this warranty will be repaired exclusively at the buyer's expense. BW Broadcast will inform the buyer of any such circumstance.

Warranty transferability: This warranty is extended exclusively to the original buyer (customer of retail dealer) and is not transferable to anyone who may subsequently purchase this product. No other person (retail dealer, etc.) shall be entitled to give any warranty promise on behalf of BW Broadcast.

Claims for damages: Failure of BW Broadcast to provide proper warranty service shall not entitle the buyer to claim (consequential) damages. In no event shall the liability of BW Broadcast exceed the invoiced value of the product.

Other warranty rights and national law: This warranty does not exclude or limit the buyer's statutory rights provided by national law, in particular, any such rights against the seller that arise from a legally effective purchase contract. The warranty regulations mentioned herein are applicable unless they constitute an infringement of national warranty law.

Safety

MAINS VOLTAGE: The Encore products operate from an AC power source between 110 and 240 V.

These power supplies use an IEC plug. The wiring format is:

Ground - GREEN/YELLOW

Neutral - BLUE

Live - BROWN



SWITCHED MODE POWER SUPPLY HAZARD Please note that the power supply unit in this equipment is of the switched mode variety and has lethal voltages present internally. The switched mode supplies are universal input fully approved type. They are non-serviceable modules and should be replaced if they fail.

FUSES Only use fuses with the specified voltage and current ratings as stated on the back panel. Failure to do so may increase the risk of equipment failure, shock and fire hazard.

TOXIC HAZARD This equipment may include R.F. components that may contain Beryllium oxide which is a highly toxic substance that could be hazardous to health if inhaled or ingested. Care should be taken when replacing or discarding such devices. Seek expert advice from the manufacturer should you physically damage a device that contains Beryllium Oxide.

OTHER SAFETY CONSIDERATIONS Do not operate this equipment in the presence of flammable gases, fumes or liquids Do not expose this equipment to rain or water.

CE CONFORMANCE This device complies with the requirements of the 1995/5/EC Radio and Telecommunications Terminal Equipment (R&TTE). The equipment will meet or exceed the following standards: EN 60215:1996 (Safety Requirements for Radio Transmitting Equipment), EN301489-11 (ERM/EMC for Radio Equipment, Part 11 Specific Conditions for FM Transmitters), EN 302 018-2 ERM (Transmitting Equipment for FM Radio Broadcasting service)



WEEE COMPLIANCE BW Broadcast Ltd is registered with Northern Compliance PCS number WEE/P3438PR/ SCH and has been issued with WEE/FA0268RX as its unique producer ID by the appropriate environment agency. BW Broadcast Ltd full comply with it explicit responsibilities, subject to WEEE Collections Policy outlined in their General Terms and Conditions of Sale, when it sells Electrical and Electronic Equipment (EEE) to B2B customers in the UK and EU.



This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused.

Electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled and disposed of in the proper way. Consequently, please do not throw your inoperative appliance with the household waste. Having purchased this appliance, it is your responsibility to dispose of this equipment appropriately.

CAUTION: To reduce the risk of electrical shock, do not remove the cover. No user serviceable parts inside. Refer servicing to qualified personnel.

WARNING: To reduce the risk of fire or electrical shock, do not expose this appliance to rain or moisture.

DETAILED SAFETY INSTRUCTIONS:

All the safety and operation instructions should be read before the appliance is operated.

Retain Instructions: The safety and operating instructions should be retained for future reference.

Heed Warnings: All warnings on the appliance and in the operating instructions should be adhered to.

Follow instructions: All operation and user instructions should be followed.

Water and Moisture: The appliance should not be used near water (e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool etc.). The appliance should not be exposed to dripping or splashing and objects filled with liquids should not be placed on the appliance.

Ventilation: The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

Heat: The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliance (including amplifiers) that produce heat.

Power Source: The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

Grounding or Polarisation: Precautions should be taken so that the grounding or polarisation means of an appliance is not defeated.

Power-Cord Protection: Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles and the point where they exit from the appliance.

Cleaning: The appliance should be cleaned only as recommended by the manufacturer. Wash your hands.

Non-use Periods: The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

Object and Liquid Entry: Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

Damage Requiring Service: The appliance should be serviced by qualified service personnel when:



- The power supply cord or the plug has been damaged;
- Objects have fallen, or liquid has been spilled into the appliance;
- The appliance has been exposed to rain;
- The appliance does not appear to operate normally or exhibits a marked change in performance;
- The appliance has been dropped, or the enclosure damaged.

Servicing: The user should not attempt to service the appliance beyond that is described in the Operating Instructions. All other servicing should be referred to qualified service personnel.

Front & Rear Panels

5

The Encore range uses several versions of the front panel, each using similar components and featuring the same method of operation.

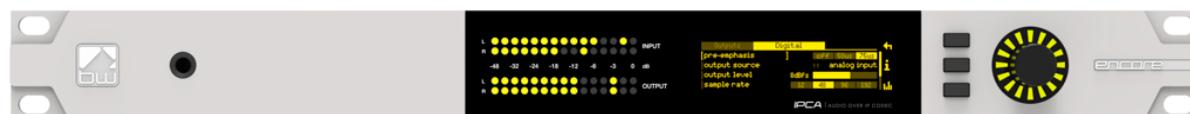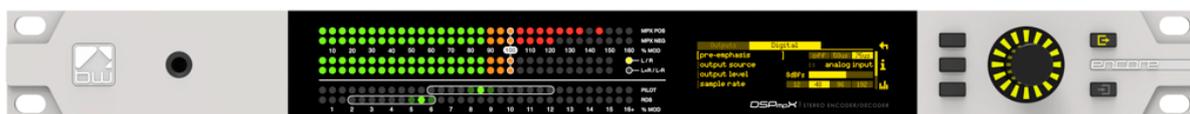


Headphone output for high quality audio monitoring

Multicolour LED matrixes for level displays

OLED displays for menu system and analysis

Scroll knob, LED ring and buttons for control and setup

Note: Some connectors on the rear panel are non-functional where appropriate to the product.

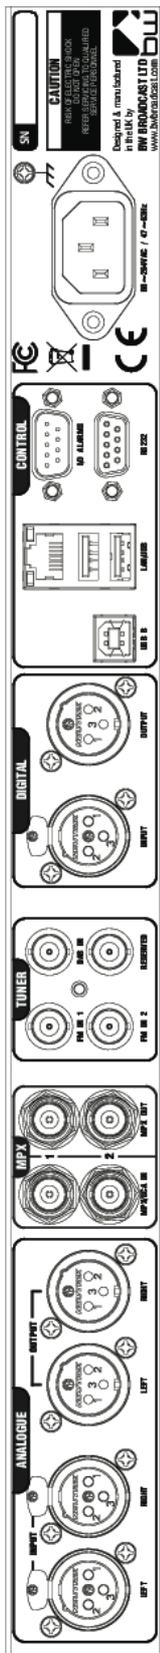


| | | | | | | | |
|--|---|------------------------------|----------------------|---|------------------------|----------------------------|--------------------------------------|
| Analog audio inputs Pin 1 0v Pin 2 + (hot) Pin 3 - (cold) | Analog audio outputs Pin 1 0v Pin 2 + (hot) Pin 3 - (cold) | MPX inputs and outputs (BNC) | Antenna inputs (BNC) | AES/EBU Digital input and output Pin 1 0v Pin 2 + (hot) Pin 3 - (cold) | USB and Ethernet (LAN) | Events & Triggers RS232 | Mains power (IEC) 90-260v AC, 25w |
|--|---|------------------------------|----------------------|---|------------------------|----------------------------|--------------------------------------|

User Interface



NAVIGATING

The Encore products have an intuitive interface based around a pushable scroll knob, surrounded by a ring of LEDs, with a series of buttons. Some products have three buttons, some five and some six.

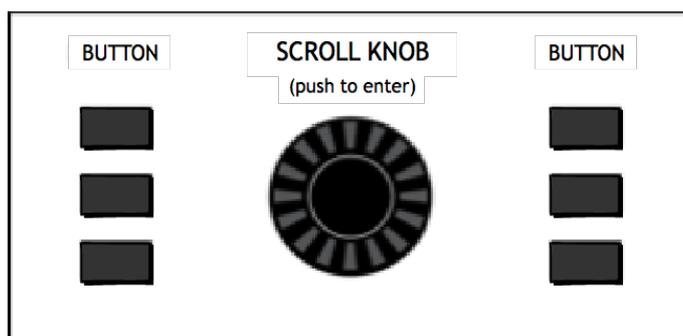

The buttons can be 'soft keys', and perform various functions denoted by icons shown adjacent to them in the displays, or may be function-specific - in which case the buttons are illuminated with the following symbols:

- | | | |
|---|----------------|---|
|  | ONLINE | Audio is passing through the unit and is being processed. |
|  | OFFLINE | Input is connected to output and audio is not being processed. |
|  | ENCODE | The unit is operating as a stereo generator, or encoder, producing a composite (MPX) output signal from the analog or digital inputs |
|  | DECODE | The unit is operating as a stereo decoder, producing discrete left and right, analog and digital outputs from a composite signal input. |
|  | INPUT 1 | Switches the unit to tuner 1 or MPX input 1. |
|  | INPUT 2 | Switches the unit to tuner 2 or MPX input 2. |

The icons that can be shown against the softkeys are as follows:

| | | | |
|---|---------------------|---|-------------|
|  | SCROLL SCREEN RIGHT |  | HEADPHONE |
|  | SCROLL LEFT |  | DELETE TEXT |
|  | BACK |  | ACCEPT TEXT |
|  | UNDO |  | INFORMATION |
|  | REDO | | |

 If the '**scroll screen left**' or '**right**' icons are displayed, this indicates that there are additional screens available. Pressing these buttons slides the displays to and from these other screens.



 '**Back**' will move back up one step in a menu tree.



'**Undo**' and '**redo**' are typically used in an audio processor to perform an 'A/B comparison' between two presets, or between a modified and an unmodified preset.



The '**headphone**' button, when pressed, will cause the icon to flash indicating that the headphone level may be directly adjusted by rotating the scroll knob (rather than having to enter the System | Audio menu as described in Section 8).

This mode will time out after 5 seconds of inactivity, or when the button is pressed again.



The '**delete text**' and '**accept text**' buttons are used when the virtual 'qwerty' keyboard is being employed to add or modify text, perhaps to name a preset or to enter other alpha-numeric strings such as email addresses etc.



While navigating the menus, if an '**info**' help-text is available for that parameter, the '**i**' symbol will illuminate next to a softkey. Pressing this softkey will show the information; pressing it again (or pressing 'back') will dismiss the info.

The Encore's high-quality OLED displays show various levels and parameters, plus allow selection and editing of the various settings throughout the unit.

The menu system is navigated by rotating the knob to highlight an item and pushing it to open a submenu, or to select the parameter for editing.


While in a submenu, pressing the 'back' softkey will return to the parent menu.

EDITING A PARAMETER

To edit a parameter, navigate to it in the menu using the knob - square brackets [...] will surround the currently highlighted parameter. Press the knob to select the parameter, then rotate the knob to change it.

Changes happen immediately as you turn the knob; press the knob again to keep the change; alternatively press the 'back' softkey to revert without changing.

The parameter setting will be shown on the OLED screen, numerically and with a progress bar, as shown below:

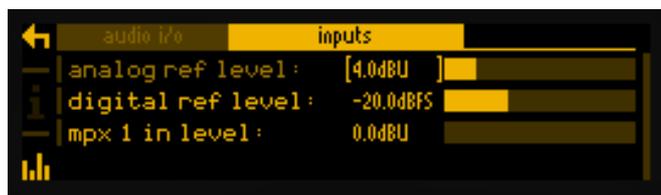

EDITING A TEXT FIELD

When editing a text field, such as the system name or a preset name, a 'qwerty' keyboard will be shown on the OLED display.

Highlight the letter to be used by turning the knob and press to select. To delete a letter, use the softkey adjacent to the 'X' icon .

To switch to a numerical keyboard, select the '123' button with the scroll knob and press to select.


To accept and save the new text, press the softkey indicated by the 'check' icon .



Installation & Operation



7.1 QUICK SETUP

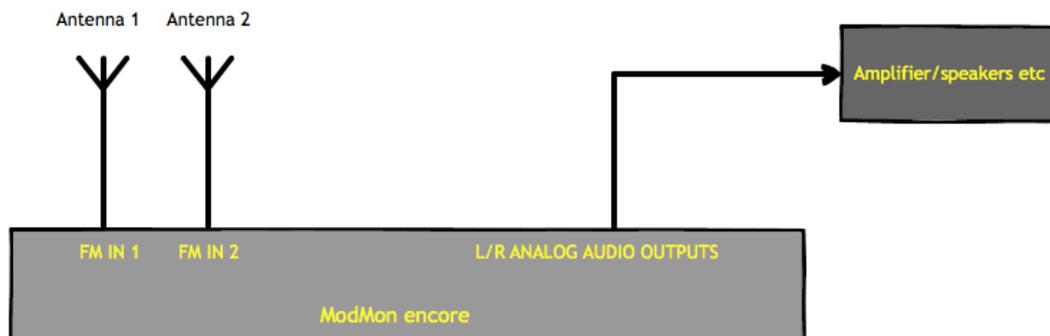

Install the ModMon Encore into the rack; The unit should be mounted in a grounded, 19" (483mm) equipment rack. While the ModMon Encore generates little heat itself, it could be damaged by being confined between other heat-generating equipment. If the equipment directly below or above the ModMon Encore runs hot, you should allow one single rack space between them.

The area directly to the rear and sides of the unit should be open, to allow free-flowing air, and the environment should be as dust-free as possible.

1. **Connect AC power to the unit;**
2. **Connect two antenna inputs;**
3. **Connect the analogue or digital output to an amplifier and speakers;**
4. **Set the receive frequencies of the two tuners in the menu Presets | Preset Name | Tuner 1 Freq and Tuner 2 Freq;**
5. **Use the red and green buttons to switch between the two tuners.**

Further information on each parameter is contained in the following sections of this manual.

7.1.1 AUDIO CONNECTIONS

The analog audio outputs are balanced XLR connectors (pin 2 +ve) and can range from peak levels of -10dBu to +24dBu. The menus in the ModMon Encore are used to calibrate the audio levels to suit your facility.

7.1.2 DATA AND GPIO CONNECTIONS

The DB-9 'GPIO' connector is used for preset switching and/or to interface with other remote control equipment or telemetry.

The RJ-45 Ethernet connector allows the ModMon Encore to be controlled over a network using the built-in web interface. TCP/IP network settings are contained in the system | communications menu.

7.1.3 ANTENNA CONNECTIONS

The two antenna connectors, labelled 'FM 1' and 'FM 2' on the ModMon Encore's rear panel connect internally to the two separate tuner modules.

Depending on your application, you may wish to use two separate antennas, or one antenna with a good quality splitter or distribution amplifier.

The connectors are 75-ohm BNC (Bayonet Neill Concelman) types. Please ensure the connectors on your cables are terminated correctly.

7.1.4 THE DISPLAYS

When the ModMon Encore is powered up, the OLED screen will show the 'home screen':



The three buttons available on the home screen are 'system', 'sleep' and 'presets'.

The 'system' and 'presets' menus are described in the following section.

The 'sleep' button will, when highlighted and pressed, apply an instant 'screensaver' function in which both screens are extinguished and a 'heartbeat' is played on the knob's LED ring to show at a glance that the unit is powered up.

The 'sleep' function will also be automatically entered if no front panel controls are operated for 30 minutes.

['sleep' will be replaced in an imminent firmware version by 'lock' – which will manually put the unit into the 'security lock' state - an added feature in that version].

7.1.5 THE LED DISPLAY

The ModMon Encore displays the following measurements in real time, on its LED matrix display:


- **MPX pos** Positive component of the mpX, multiplex (or 'composite') signal being received by the selected tuner. Range: 0-130%
- **MPX neg** Negative component of the mpX signal. Range: 0-130%
- **L/R** Left and right demodulated audio, or:
- **L+R** The demodulated stereo sum (i.e. mono) component of the audio.
- **L-R** The demodulated stereo difference component of the audio.
- **Pilot** the 19kHz stereo pilot signal. Range: 0-16%
- **RDS** the 57kHz RDS sub carrier level. Range: 0-16%

Note: L/R and L+R/L-R (matrix) modes are switched by selecting the SYSTEM menu, where this switch is first-up. The active mode is indicated by a green LED adjacent to either L/R or L+R/L-R legends.

7.1.6 THE OLED DISPLAY

From the home screen, a press of button 1 will slide the display to the first of two screens that show RDS analysis of the station being received.

An example of the screen is:

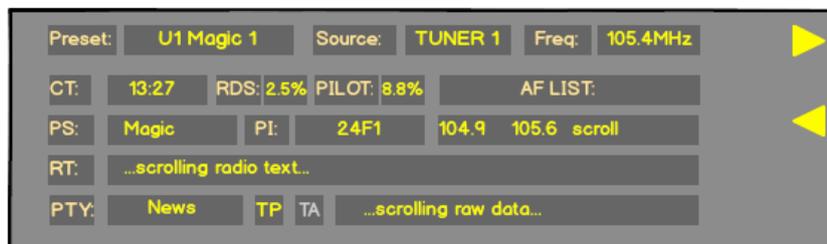

Pressing button 1 again will scroll to a similar screen showing RDS data being received by tuner 2; press button 2 to move back to the home screen.

These screens show realtime data of the following:

- Preset number and name
- Source tuner
- Frequency
- CT (Clock Time) if available
- RDS level in percentage of total deviation
- Stereo Pilot level in percentage of total deviation
- A scrolling list of Alternate Frequencies (AF)
- PS (Program Service, i.e. station name)
- PI (Program Identifier) code
- The scrolling RadioText content
- The Program Type (PTY) number

- Presence or absence of Traffic Program and Traffic Announcement*
- Scrolling RDS data blocks

* TP is a flag that indicates that the station does periodically transmit traffic information; The TA flag indicates that the station is currently transmitting traffic information.

A further press of button 1 will show a status screen displaying various parameters of the signals being received by the two tuners:

| | | | | | |
|---------|-----------|--------|-----------|---------|---------|
| Preset: | U1 BBC R2 | DATE: | 18 NOV 16 | TIME: | 13:27 n |
| TUNER 1 | 88.8MHz | BBC R2 | TUNER 2 | 89.1MHz | BBC R2 |
| RSSI | | 67 | RSSI | | 54 |
| BW | | 236 | BW | | 236 |
| MPTH | | 12% | MPTH | | 16% |
| USN | | 8.8% | USN | | 10.2% |

This screen shows realtime displays of the following, for both tuners:

- Preset number and name
- Date and time ('n' indicates that the system is locked to an ntp server)
- Tuner frequencies and PS (station name)
- RSSI (Receive Signal Strength Indication)
- BW (Bandwidth) in kHz
- MPTH (Multipath) in percentage
- USN (Ultrasonic Noise – or 'mpx noise') in percentage

7.2 OPERATION

Here's how to set up the ModMon Encore to monitor and switch between two stations:

1. **Ensure receive antennas are connected to both rear panel antenna ports.**
2. **From home screen, select 'presets'**
3. **Select 'F1 Monitor' by scrolling to it and pressing the knob.**
4. **Scroll to 'tuner 1 freq', press the knob, and dial in the frequency of the first station to be monitored. Press knob to accept.**
5. **Press the 'back' button, scroll to 'tuner 2 freq', press the knob and dial in the frequency of the second station to be monitored.**
6. **Press 'back', scroll to 'save to' and select (for example) U1. Press the knob to save your settings to preset U1 (User 1).**
7. **Now, pressing button A will select tuner 1, pressing button B will select tuner 2. The modulation levels of each will be shown on the LED displays as they're selected.**
8. **In this way, you can perform an 'A/B comparison' between two transmissions.**

Note that in order to *hear* the A/B comparison, you'll have to go to the System | Audio menu, and set the required audio source (analogue, digital or headphones) to 'active tuner'. Otherwise that output will continue to carry the audio from one of the tuners irrespective of the actions of the A/B buttons.

The reason for this option is that you may be using the ModMon Encore to feed off-air audio from your station via its audio outputs to your facility for confidence monitoring; however you're the engineer, and you might decide to use the unit's headphone output to monitor another transmitter, or wish to observe another station's audio performance on the LED meters, without interfering with what the rest of the building is hearing.

With the ModMon Encore, you can do this!

There's more information about the operation of the ModMon Encore in section 8 – 'Presets' of this tome.

System Configuration



THE SYSTEM MENU

This menu contains all the fundamental unit configuration settings, and should be the first place you go after taking the Encore out of its box!

These settings are peculiar to the installation, perhaps the transmitter site itself, as opposed to the following 'Presets' section (Section 9) which are particular to the exact usage and model of the unit.

Power the unit up, and from the home screen, highlight and press the 'system' button:



You'll now see a list of submenus:

- Audio i/o:** Contains all audio input and output settings, as well as output routing selections.
(Not present in all Encore products)
- MPX generator:** Settings for the mpx ('composite') generator.
(Not present in all Encore products)
- Events:** A comprehensive events/alarms/scheduling system.
- Time:** Manually setting the unit time and date, or automatically setting this via ntp.
- Users:** Set up admin user and standard users.
- Communication:** A sub menu containing settings for identity, ethernet, email, web remote, snmp, telnet, logging and RS232.
- About:** Unit information and power supply status.

Note: Certain menu items will be different or not present in some products, as appropriate to their features.

Let's take some time to discuss the contents of each of these menus:

8.1 AUDIO I/O

(Certain menu items are omitted in some products in the Encore range).

Within this there are two submenus – 'inputs' and 'outputs'.

'Inputs' allows you to set the operating level of the unit when referenced to the rest of your installation. For both analog and digital reference level, please set these to your maximum normal operating level.

For example, if you will be feeding analog audio into the unit that may reach but never exceed +12dBu, set the 'analog ref level' to +12. (For PPM users, PPM4=+4, PPM5=+8, PPM6=+12).

Similarly, if your digital levels may meet but not exceed -10dBFS, set 'dig ref level' to -10.

'Outputs' allows you to set output levels from each physical output, and choose what source feeds those outputs.

The sections of this submenu are:

| | |
|-------------------------------------|--|
| An (analog) output source: | none analog audio digital audio tuner 1 audio tuner 2 audio test tone (a 1kHz sine wave) diversity |
| Analog output level: | -18dBu to +24dBu |
| Dig (digital) output source: | none analog audio digital audio tuner 1 audio tuner 2 audio test tone diversity |
| Dig output level: | -20dBFS to 0dBFS |
| Dig output sample rate: | 48kHz 96kHz 192kHz |
| MPX 1 source: | none mpx in 1* tuner 2 mpx* mpx generator pilot tone rds |
| MPX 1 out level: | 0dBu to +12dBu** |

| | |
|---------------------------|---|
| MPX 2 source: | none mpx in 1* tuner 1 mpx* tuner 2 mpx* mpx generator pilot tone rds |
| MPX 2 out level: | 0dBu to +12dBu** |
| Headphones source: | none analog audio digital audio tuner 1 audio tuner 2 audio test tone diversity |
| Headphone level: | 0 to 100% |

For convenience, the headphone source and headphone level settings are duplicated directly under the 'audio i/o' menu.

* Note that if 'tuner 1 (or 2) mpx', or 'mpx in 1' is selected as the source for an mpx output, the received signal merely passes through the unit, unaffected by the 'fmsi' signal processing (please see section 9 of this manual).

** The mpx output level adjustments only affect the output of the internal mpx generator. If the mpx (1 or 2) output source is set to 'tuner 1 (or 2) mpx', the output level is fixed at +6dBu.

8.2 MPX GENERATOR

(Not present in all Encore products)

This menu controls the on-board stereo generator ('MPX' meaning multiplex, sometimes known as 'composite').

The stereo generator includes a composite clipper. With a drive level of 0dB, this has no effect; above that it will become active and clip the MPX signal. The clipper contains RDS/SCA protection filters, also there is a pilot protection filter option.

The audio clipper protects the MPX generator from peak excursions and overshoots in the source audio. It is distortion-cancelling and anti-aliased.

Furthermore, there is an 'overshoot compensator' which handles any overshoots from the main clipper, and restricts the audio bandwidth to 15kHz.

The MPX generator menu contains the following parameters:

| | |
|--|---|
| Source: | none analog audio digital audio tuner 1 audio tuner 2 audio diversity test tone |
| Preemphasis: | 50uS, 75uS, off. |
| Pilot level: | 0 to 12% in 0.1% increments |
| RDS level: | 0 to 5% in 0.1% increments |
| Audio clip drive | 0 to 12 |
| O-sh compensate drv (overshoot compensation drive) | -3 to 9 |
| Comp (composite) clipper drive: | -0.5 to 2 |
| Pilot protection | no / yes |

8.3 EVENTS

This is a very comprehensive monitoring, events and alarms section. It allows changes to be made to the configuration of the Encore unit resulting from external sources via the Events and Triggers port, or from conditions detected from incoming signals – be they via the tuners or the audio inputs.

It is really a telemetry system in itself. As events can be triggered from external sources, you can use it to monitor other equipment in your facility, even door-open sensors, intruder alarms, in fact anything that can pull one of the four input pins to 0v.

The system is designed in a very intuitive, conversational way. “When *this* happens, for *this* long, do *these* things. Then when it’s stopped for *this* long, do *that*.”


In the ‘events’ menu, the first sub-menu is ‘GPO pin config’. In this section, with the ‘mode’ parameter, you can determine what each of the four GPO pins do:

1. Switch as an event action (see later);
2. Track tuner 1 signal strength;
3. Track tuner 2 signal strength;
4. Track analog input level;
5. Track digital input level.
6. Track unit temperature.

With option 1, the pin is a ‘digital’ output (i.e. either ‘on’ or ‘off’). With options 2 through 6, the pins act in an analog manner, outputting 0 – 5v which will track whatever signal you have selected.

The other option available in this menu is 'polarity' – where you can set each pin to output either active Hi-Z (high impedance) or active low (i.e. connected to 0v).

The Events and Triggers port pinouts are:

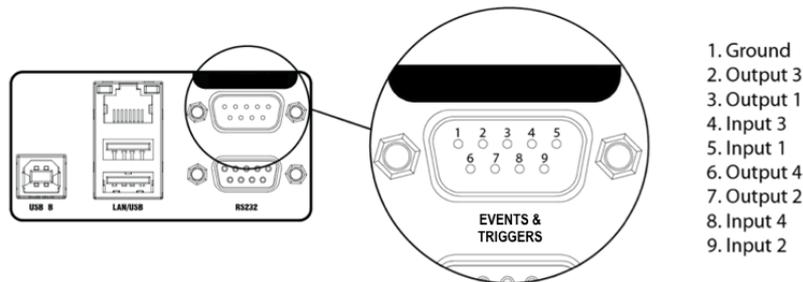

Next is the list of the 8 available events, each of which can perform a variety of actions when triggered.

Please highlight and select one of the events.

To set up an event:

1. For now, leave the 'active' setting 'off'.
2. Select from the list what you want to 'trigger' the event; the choices are tuner signal strengths, tuner audio levels, analog and digital inputs and outputs, unit temperature and the status of the GPI pins.
3. Then select what 'condition' should cause the trigger – more than, less than or in some cases equal to or not equal to.
4. Next, set the 'value' – the range here varies according to the trigger type.
5. Next is the time to wait after triggering before the event is activated (for example, wait for 15 seconds of silence before activating the event).
6. 'revert' determines what happens when the trigger condition ends – does the unit go back to its previous condition, and if it does, is it immediate or delayed?
7. Next you can set this revert delay.

The next parameters set what actions the event causes. You can set it to do any or all of the following:

- load a different preset;
- change tuner frequencies;
- change various output sources;
- switch one of the GPO pins;
- send an email;
- send an snmp trap message.

Note that if you select 'load preset' as an action, the 'revert' function is greyed out and not available. This is because a change of preset can involve a change of frequency of

both tuners, so in this case there's no way the Encore can know when or if the event trigger has ended.

When you're happy with the event setup, return to the top of the event menu, and switch it to 'active'.

Exit from the 'events' menu by repeatedly pressing 'back' until you reach the home screen.

8.4 TIME

This menu allows you to set the unit's time and date, or if it has network access to an ntp server, to use that.

The following parameters can be accessed:

| | |
|--------------------|---|
| uptime: | A display of the time, in hours, minutes and seconds that the Encore has been powered up. |
| time: | Allows manual setting of date and time. |
| ntp: | off / on (whether to use ntp or not) |
| update now: | 'run' – pressing this forces an immediate update of system time via the ntp server. |
| host: | the ntp hostname, e.g pool.ntp.org or an IP address. |
| period: | How often an ntp time update occurs – every 1hr, 12hrs or 24hrs. |

8.5 USERS

This menu allows you to define parameters for people who will have access to the Encore unit, and who will be able to log in via the web remote.

There are four users available:

| | |
|---------------------|---|
| admin | A 'power-user' who is able to edit/change settings as well as view all screens; |
| user 1, 2, 3 | These users can be limited to either merely viewing settings and screens, or controlling them in the same way the admin user can. However, a non-admin user with 'control' privilege cannot add or change any other user's details. |

Within the users menu, you are able (if you're an admin) to set the users' password, their email addresses and their privileges.

[In an imminent firmware release, 'security' will be implemented which will utilise these settings more comprehensively].

8.6 COMMUNICATION

This menu contains the following submenus:

- Identity:** Allows a unit name, site number and lat/long ('GPS position') to be set. This is useful when managing multiple units via the web interface, and when receiving emails from the 'events' section, so it's obvious where the email came from.
- Ethernet:** Allows you to set the following parameters, relevant to the IP network the Encore is connected to:
- DHCP:** 'on' if your network has a DHCP server from which the Encore will be able to derive network parameters automatically; set to 'no' to define these settings manually.
 - DNS:** 'on' to use the dns server derived above, or 'off' to manually enter a DNS server.
 - IP:** Manually enter the unit's IP number.
 - Subnet mask:** Manually enter the unit's subnet mask appropriate to your network.
 - Gateway:** Manually enter the gateway IP number (usually the IP number of your router).
 - DNS 1:** Manually define one DNS server IP number.
 - DNS 2:** Manually define an alternate DNS server.
 - MAC:** A display of the unit's mac address
 - Link:** Shows 'up' if the unit's ethernet connectivity is working, 'down' if not.
- Email:** Allows you to set up the email communication of the Encore:
- Sender:** the email address of the Encore, e.g encore-01@stationname.com
 - Mail method:** 'BW' to allow the unit to send emails via the BW Broadcast monitoring system; 'SMTP' if you wish to send the emails via your own SMTP server;

(if 'SMTP' is selected, further settings will appear allowing you to specify the name of this server, it's authentication method and if necessary the SMTP password).

- Test:** This submenu allows you to send a test email to one of the users (previously defined in 7.1.5 'Users' in this manual).
- Web remote:** Here you can turn on or off access to the Encore by the 'Encore web remote' software, and to define the port that this web remote will use – default is the common http port 80.
- SNMP:** Settings for using Simple Network Management Protocol, to allow the Encore to communicate with other telemetry and monitoring systems.
- The SNMP 'MIB' file is accessible when the unit has an ethernet connection, by navigating to `http://[unit IP]/Encore.mib`
- Telnet:** Set Telnet access on or off, and define the port.
- Logging:** Sets up a UDP connection to an external logging server, and/or log to file o via a serial connection.
- RS232:** Enable/disable the rear-panel RS232 (serial) connector, and sets the baudrate to be used.

8.7 ABOUT

A display of unit details, serial number, hardware and software versions etc. This information may be requested by a BW Broadcast support technician if you need live assistance. The OLED 'sleep' timeout is also set here.

RESTART AND FACTORY RESET

There is also a 'restart' and a 'reset to defaults' command in this menu. Beware – 'reset to defaults' will remove any settings you have modified in Presets, and everything you have entered in System.

...which includes the Ethernet settings – so this isn't a good thing to do if you're connected remotely, as you may lose IP connectivity.

STATUS

This submenu shows values of current hardware parameters: PSU voltage; PSU current; PSU power; fan voltage; fan state; temperature; plus fan speed control – which should be left set to 'auto' unless otherwise advised by a BW Broadcast support technician.

Presets Configuration


9.1 THE PRESETS MENU

This menu can be thought of the same way as a set of presets on a car radio or domestic hifi tuner. These settings are particular to the stations or frequencies being received.

From the home screen, highlight the 'presets' button, and press the knob.



You will be presented with the following screen:

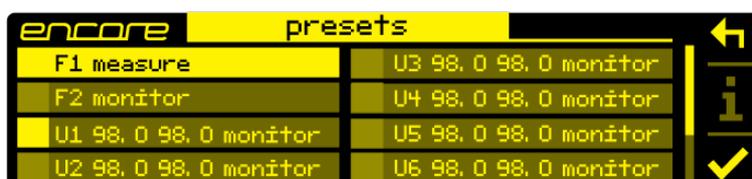

This shows the list of presets – those prefixed with the letter F are factory presets, the prefix U indicates a user preset location.

The rest of the preset locations will become visible if you scroll down the list.

To the left of each preset name is the 'status block'.

The current preset is shown highlighted – if you scroll away from this, the status block to the left of the preset name remains filled to indicate that this is the preset that is currently loaded.

If this block shows the letter A, this indicates that the preset has been selected by an 'action' from the 'events' section of the ModMon Encore (see section 8 in this manual).

If the block shows the letter S, the preset has been selected by a 'schedule' event.

If a preset has been edited but not saved, an asterisk * is shown in this block.

If multiple statuses are active, the priority is: A, S, *, ■.

In addition, in this screen, softkey 2 shows the i symbol. Pressing this will display extra information about the highlighted preset, such as RDS station name (if available) and date/time the preset was created and last used.

The factory presets cannot be overwritten, however they may be used as good starting points for you to create your own presets, which can then be saved in one of the user preset locations.

The factory presets are:

- F1:** Monitor: Contains a group of settings determined to provide good tuner performance even in less than ideal signal conditions. The proprietary 'FMSI' signal processing system is enabled here, to recover good stereo performance.
- F2:** Measure: Signal processing is bypassed, to allow measurements of the incoming signal with it unaffected by any processing within the ModMon Encore.

9.1.1 LOADING A PRESET

To load a preset, scroll to it using the knob, when your desired preset is highlighted, press the softkey next to the 'check' icon .

Or you can scroll to the preset and press the knob – this will load the preset *and* enter preset edit mode.

If you have a user preset loaded, and you then load one of the factory presets, the receive frequency and deemphasis settings are not altered. The ModMon Encore will in this case apply the rest of the processing and refinements contained within that factory preset.

9.1.2 EDITING A PRESET

To edit a preset, scroll to it and press the knob. This action will load the preset too – as the configuration is actually edited 'live'.

As soon as a preset is modified, an asterisk * appears in the status block, and softkey 3 displays the undo icon .

An asterisk will also be shown in the top line of the edit screens as soon as any modification is made, to remind you that the preset is in a modified state.

Pressing the 'undo' button will revert the preset (and therefore the live state of the ModMon Encore) to its unmodified and saved state. Once pressed, the 'redo' symbol  is shown against a softkey. Guess what happens if you press it!

If you attempt to exit the preset edit menu and load another preset before saving your changes, a warning dialog box will appear, informing you that if you continue, your changes will be lost, and asking if you wish to continue, or go back to save your modified preset.

9.2 THE TUNERS MENU

Once you press the knob to enter the preset edit mode, the submenu shows:

Tuner 1 frequency: Allows setting of tuner 1 receive frequency.

Tuner 2 frequency: Allows setting of tuner 2 receive frequency.

Then follows some status displays of both tuners:

RDS: PS, PI, PTY, TA and TP;

RF: RSSI (signal strength), BW (bandwidth), MP (multipath) and USN (ultra sonic noise, sometimes called mpx noise).

Tuner deemphasis: Setting of de-emphasis appropriate to your region: 75uS for Americas, 50uS for rest of the world, or 'off' for certain measurement functions.

Save to: Allows the settings contained within the current preset to be saved back to itself (not if it's a factory preset) or to any other user preset slot.

Note: If you try to save to a preset slot other than the one you've modified, a pop-up will warn you that you are about to overwrite the contents of that preset, and asking if you're OK with that.

9.2.1 THE FACTORY PRESETS

The factory presets are F1 Monitor, and F2 Measure.

The ModMon Encore features the same powerful DSP-based signal processing employed in the world-class rebroadcast receiver, the RBRX Encore - including the proprietary FM Stereo Improvement (FMSI) system.

This system can dramatically improve the reception of less than optimum FM signals. It can take a weak, noisy signal and transform it into one that is noise-free with full stereo quality.

If you're using the ModMon Encore to monitor the audio of your or any other off-air transmission, it's probably worthwhile starting off by loading the F1 Monitor preset, then setting your frequencies before saving to a user preset.

Then you're sure that the resulting audio will be the best quality possible, and the signal will be largely untroubled by noise.

What you'll hear and see on the ModMon Encore's LED bargraphs and status screens will be the result of the FMSI process.

However, if you wish to make absolute measurements of the signals, you may want to disable this processing, and allow the ModMon Encore to reproduce and display the raw received signal.

In this case, please use the F2 Measure preset as the basis for your user presets.

Be aware though that in this case, due to the effects of ultrasonic noise and multipath interference, the ModMon Encore's modulation readings will be affected by these factors, and will not be a true representation of your transmitter's performance.

They will, however be a faithful representation of the signals actually being received, including whatever outside influences and interference the real world has applied.

A neat feature of the ModMod Encore resulting from the way the presets are handled, is that selecting a factory preset will not change the frequencies the tuners are set to.

So once you have a preset selected, you can switch to F1 Monitor and then to F2 Measure to hear and observe the difference the FMSI processing is making, without losing your preset's settings.

Menu Structure

10

PRESETS >

F1 Monitor
 F2 Measure
 U1...U8 user presets

[Preset contents similar:]

tuner 1 freq: (87.5-108MHz)
rds: status displays PS, PI, PTY
rds: status displays TP, TA
rf: status displays RSSI, BW
rf: status displays MP, USN
tuner 1 deemphasis (off/50uS/75uS)
tuner 2 freq: (87.5-108MHz)
rds: status displays PS, PI, PTY
rds: status displays TP, TA
rf: status displays RSSI, BW
rf: status displays MP, USN
tuner 2 deemphasis (off/50uS/75uS)
save to: Ui to U8

SYSTEM >

Display mode (L/R / L+R)

AUDIO >

OUTPUTS

an output source (none/tuner 1/tuner 2/active tuner/test tone)
an output level (-18dBu to +24dBu)
dig output source (none/tuner 1/tuner 2/active tuner/test tone)
dig output level (-20dBFS to 0dBFS)

Remote listen port nnnn)
Remote listen bitrate (32/48/64/128) } future
Remote listen codec (MP3/AAC/AAC-HE))

headphone source (none/tuner 1/tuner 2/active tuner/test tone)
headphone level (0-100%)

headphone source (none/tuner 1/tuner 2/active tuner/test tone)
headphone level (0-100%)

SCHEDULER

SCHEDULE (1...8)

run (never/once/repeat) }
days (su/mo/tu/we/th/fr/sa/smtwtfss) } future
start time (hh:mm:ss) }
load preset (F1-F12, U1-U8) }

EVENTS >

GPO PIN CONFIG >

pin 1...4

mode (dig/ana)
analog output (rssi 1/rssi 2/modulation 1/modulation 2/usn 1/usn 2/multipath 1/multipath 2/hp level)
polarity (HiZ/low)

EVENT 1..8 >

active (off/on)
trigger (rssi 1/rssi 2/modulation 1/modulation 2/usn 1/usn 2/multipath 1/multipath 2/gpi1/gpi2/gpi3/gpi4)
condition (equal to/not equal to) or (more than/less than)

SYSTEM > EVENTS cont...

value (on/off) or (value appropriate to trigger)
on delay (0 to 60s)
load preset (F1/F2/U1...U8)
alarm send (start/end/both)
set/change to (none/analog/digital)
revert (tuner 1/tuner 2/active tuner/test tone)
delay time (yes/no/delay)
set GPIO pin name (0 to 12s)
send trap (1-4)
name (qwerty)
send trap (off/on)

USERS >

ADMIN >

password pass (default)
email (email address)

user 1...3

password pass (default)
email (email address)
privilege (view/control)

TIME >

uptime (display of dd:hh:mm:ss)
time set (hh: mm: ss: mm/dd/yyyy)
ntp (off/on)
update now run (command)
host (name or IP number)
period (1hr/12hr/24hr)

COMMUNICATIONS >

IDENTITY >

system name
site number
lat/long (xxx.xxx yyy.yyy)

ETHERNET >

dchp (off/on)
dns (off/on)
ip
subnet mask
gateway
dns 1
dns 2
mac
link (down/up)

EMAIL >

sender
mail method (bw/smtp)
smtp server
authenticated (yes/no)
smtp password

TEST >

recipient (admin/user1/user2/user3)
send test test

WEB REMOTE >

active (off/on)
port 80

SNMP >

enable (off/on)
port 161
community
read only (off/on)
name
description

TELNET >

active (off/on)
port 23

LOGGING >

serial (on/off)

file (on/off)
filename/location
udp (off/on)
udpip

SYSTEM > COMMUNICATIONS > LOGGING cont...

udpport
test logging run (command)
RS232 >
active (yes/no)
baudrate (9600/19200/57600/38400/115200)

ABOUT >

product
serial#
bootloader
hardware
os ver
media engine ver
front panel ver
power supply ver
PSU STATUS >
psu voltage
psu current
psu power
fan voltage
fan state status: on/off/err
fan speed (off/low/med/high/auto)
temperature
Sleep timeout (15s - 5h)

SLEEP immediate lock/sleep



Routing & Block Diagram

1 1

Please see below for an audio, RF and RDS data routing diagram.

This can help you understand the enormous capabilities of the Encore family of products!

Encore
Routing diagram

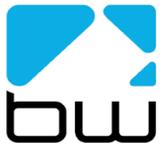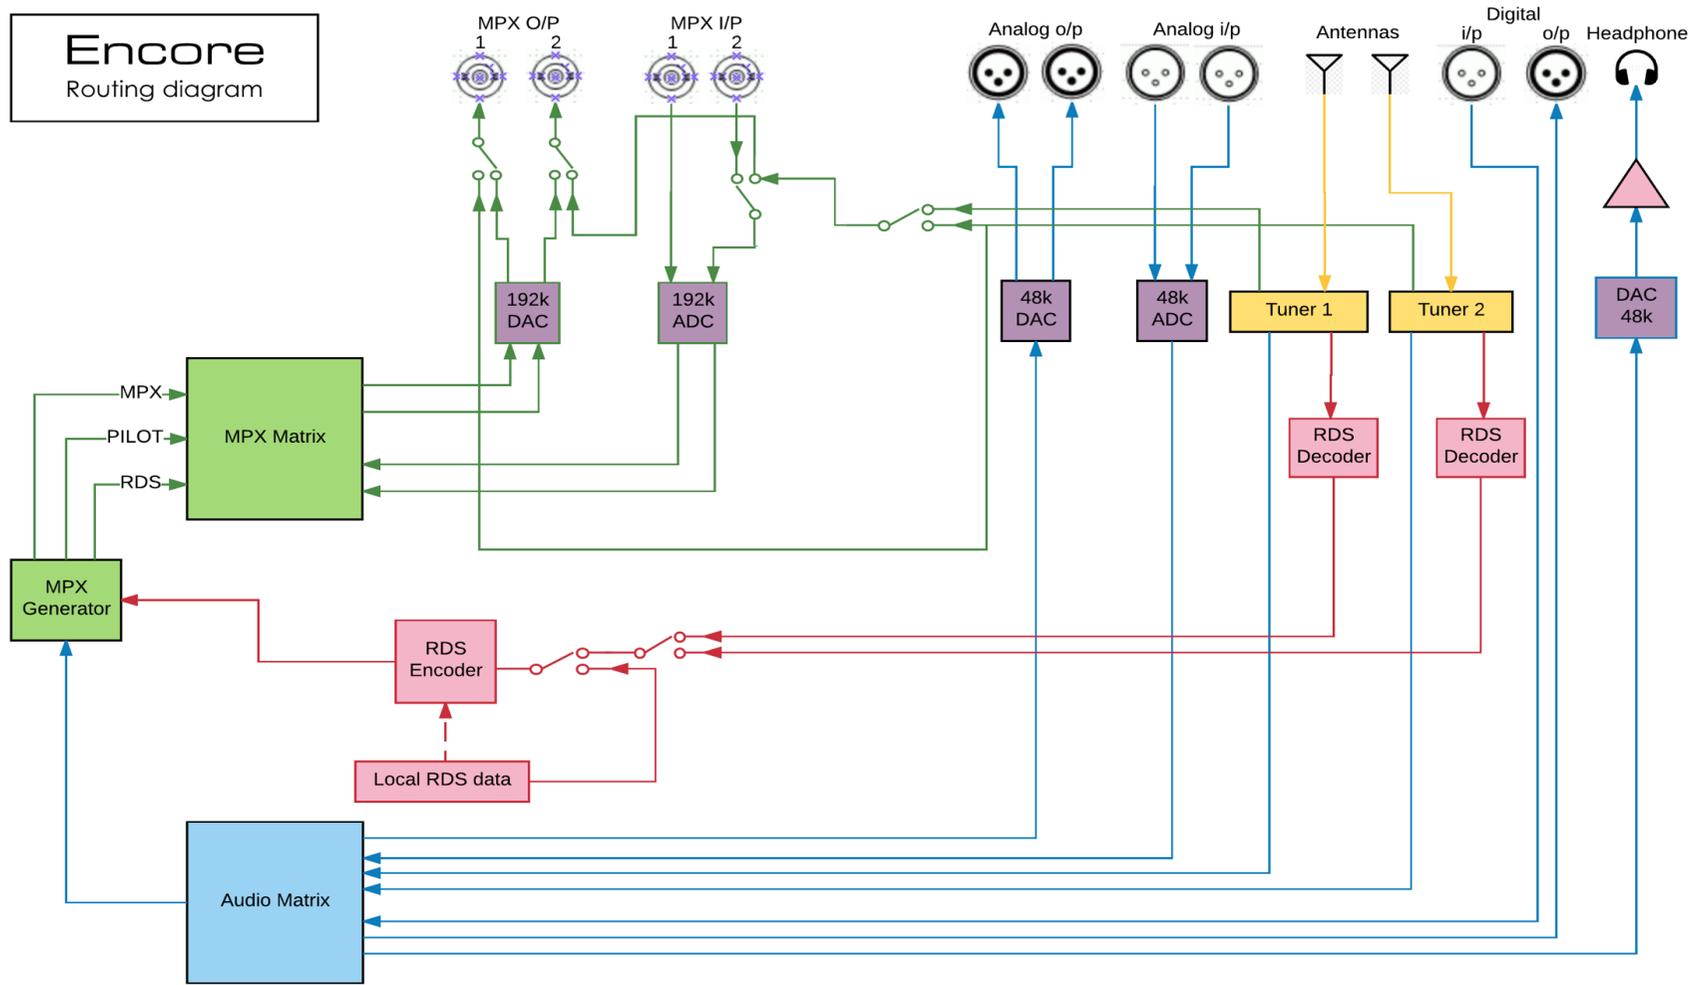

bwbroadcast
Encore products
(some parts not applicable in all products)

AL
26/1/17
rev 3

- Audio
- MPX
- RDS data
- RF

Technical Specification

12

Encore family specifications. Certain parameters are irrelevant in some products.

TUNER (Dual)

| | |
|--|------------------------------------|
| Inputs | 2 x 50 ohm, BNC female |
| Tuning range | 65-108MHz in 50kHz or 100kHz steps |
| IF bandwidth | 56kHz - 311kHz dynamic or fixed |
| De-emphasis | 75µs, 50µs or Off |
| SNR (Mono/Stereo) | -79dB / -60dB |
| THD (Mono/ Stereo) | 0.011% / 0.16% |
| Stereo Separation | >50dB |
| Adjacent / alternate channel rejection | 70dB / 74dB |
| RF input level | RF 0.5V to 2V |

ANALOG INPUT

| | |
|------------------|-----------------------------|
| Nom. input level | +4 dBµ |
| Max input level | +24 dBµ |
| Connectors | XLR balanced EMI suppressed |
| A/D conversion | 24 bit |
| Distortion | <0.01% |

ANALOG OUTPUT

| | |
|---------------------------------|-----------------------------|
| Analog output | 0-24 dBµ adjustable |
| Connectors | XLR balanced EMI suppressed |
| D/A conversion | 24 bit |
| Audio monitoring output on jack | +12dB maximum |

DIGITAL INPUT (AES/EBU)

| | |
|---------------------|---------------------------------|
| Sampling rate | 32-192 kHz (MPX over AES ready) |
| Connector | XLR balanced EMI suppressed |
| Nominal input level | -20 dBFS |

DIGITAL OUTPUT (AES/EBU)

| | |
|---------------|---------------------------------|
| Sampling rate | 32-192 kHz (MPX over AES ready) |
| Connector | XLR balanced EMI suppressed |
| Level | -32 - 0 dBFS adjustable |

MPX / RDS

| | |
|-------------------|--|
| Output level | 0 - 12 dBµ adjustable |
| MPX outputs | 2 x BNC EMI suppressed |
| D/A conversion | 192KHz, internally oversampled |
| Stereo separation | >60 dB 20Hz - 15 kHz |
| MPX inputs | 2 x BNC EMI suppressed |
| A/D conversion | 192KHz, internally oversampled |
| Pilot output | BNC software switched with MPX2 output |

REMOTE CONTROL

| | |
|------------|---|
| Connectors | Serial, USB A, USB B, RJ45 |
| Protocols | HTTP (browser, mobile, API), SNMP, TELNET, FTP, SMTP, RS232 |

PHYSICAL

| | |
|-------------|--|
| Power | 90-260vAC, 50/60Hz, 25w IEC connector. |
| Size (inch) | 19W x 1.73H x 9.84D |
| Size (mm) | 482W x 44H x 200D |
| Weight | 1.6kg |

This manual was written by Andy Linton. © BW Broadcast Ltd. 2017. E&OE.

Encore products are manufactured in the UK by BW Broadcast Ltd. IO Centre, Croydon Road,
Croydon, CR0 4WQ, UK. Tel: +44 208 253 0290. US toll-free: 1-866 376 1612.

Email: support@bwbroadcast.com

'Encore' is a trademark of BW Broadcast Ltd.